
CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

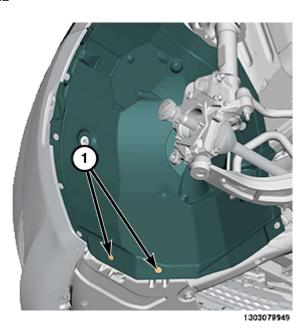


- 1. Raise and support the vehicle (Refer to Vehicle Quick Reference/Hoisting/Standard Procedure)
- 2. Remove the screws (1) attaching the wheelhouse splash shields to the front belly pan.

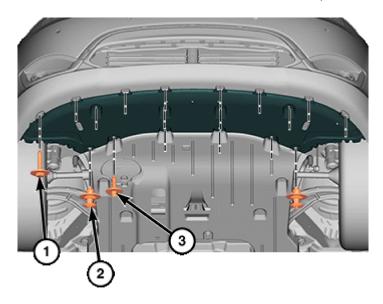

1304099682


- 3. Remove the eight front screws (1).
- 4. Remove the two push-pin fasteners (2).
- 5. Remove the four rear screws (3).

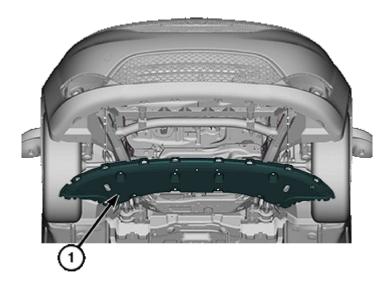

1305079847


6. Remove the front belly pan (1).

INSTALLATION

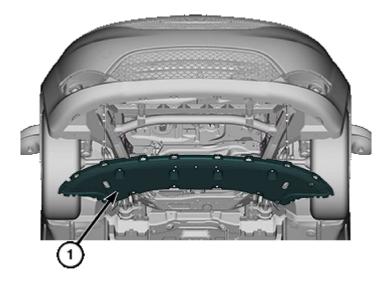


1305079847

1. Install the front belly pan (1) onto the front fascia.

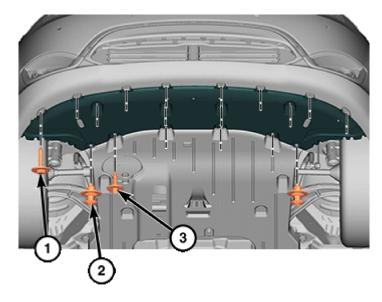

1304099833

- 2. Install the two push-pin fasteners (2).
- 3. Install the eight front screws (1).
- 4. Install the four rear screws (3) and tighten all fasteners to the proper (Torque Specifications).

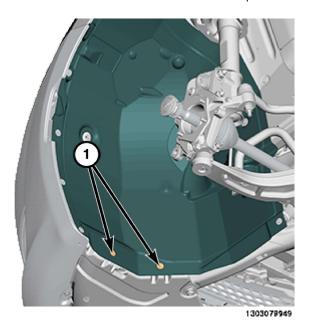

5. Install the screws (1) attaching the wheelhouse splash shields to the front belly pan.