
# **CHILTON**LIBRARY



## **Removal & Installation**


### **REMOVAL AND INSTALLATION**

### **REMOVAL**

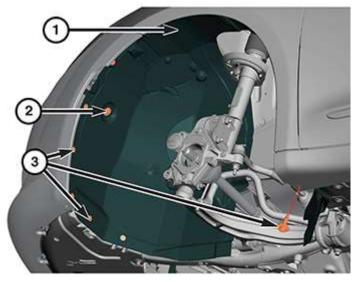


2313082052

- 1. Raise and support the vehicle (Refer to Vehicle Quick Reference/Hoisting/Standard Procedure).
- 2. Remove the nut (2) from the front wheelhouse splash shield (1).
- 3. Remove the seven screws (3).

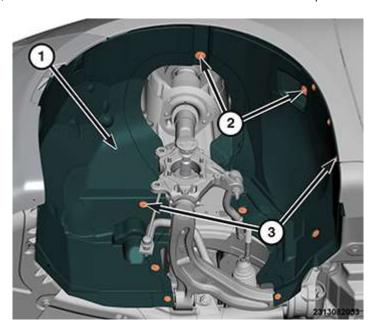


- 4. Remove the two nuts (2).
- 5. Remove the nine screws (3).
- 6. Remove the front wheelhouse splash shield from the vehicle (1).

### **INSTALLATION**

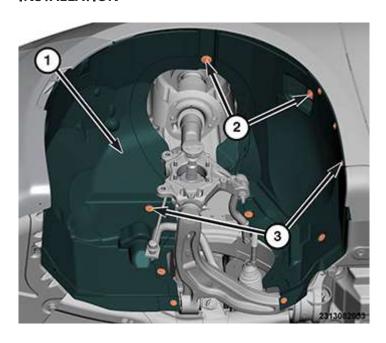

- 1. Position the wheelhouse splash shield (1) onto the vehicle.
- 2. Install the nine screws (3) and tighten securely.
- 3. Install the two nuts (2) and tighten securely.

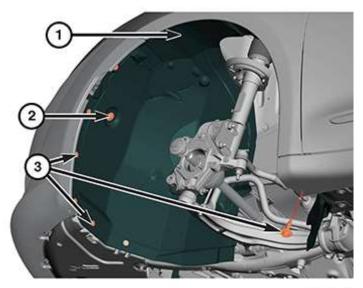

2313082052

- 4. Install the seven screws (3) and tighten securely.
- 5. Install the nut (2) and tighten securely.
- 6. Remove the support and lower the vehicle.