
# **CHILTON**LIBRARY




## **Removal & Installation**

#### **REMOVAL AND INSTALLATION**

### **REMOVAL**

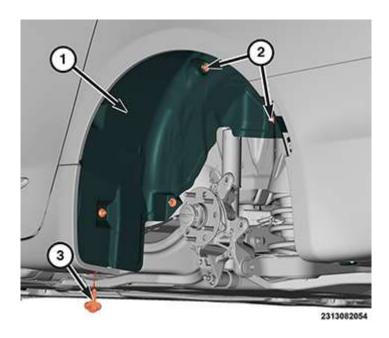


- 1. Raise and support the vehicle (Refer to Vehicle Quick Reference/Hoisting/Standard Procedure).
- 2. Remove the tire and wheel assembly (Refer to 22 Tires and Wheels/Removal and Installation).
- 3. Remove the four nuts (2) from the front wheelhouse splash shield (1).
- 4. Remove the one screw (3).

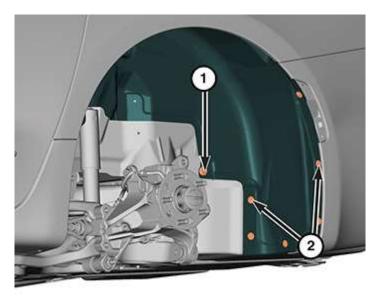


2313082055

- 5. Remove the nut (1).
- 6. Remove the seven screws (2).

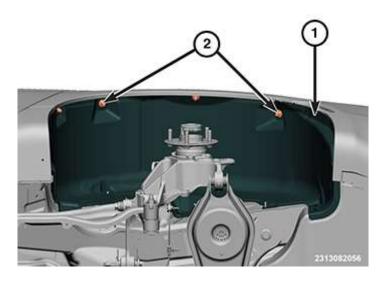


- 7. Remove the four nuts (2).
- 8. Remove the rear wheelhouse splash shield from the vehicle (1).

## **INSTALLATION**

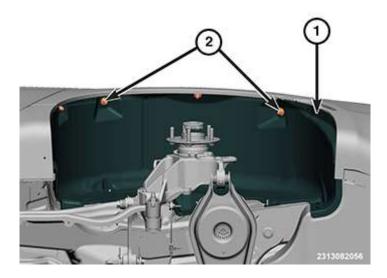


- 1. Position the rear wheelhouse splash shield (1) onto the vehicle.
- 2. Install the four nuts (2) and tighten securely.

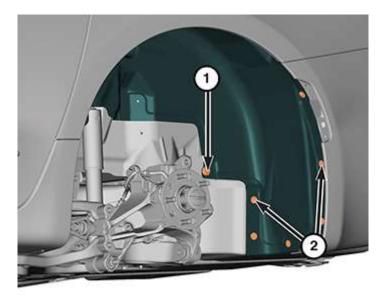

2313082055

- 3. Install the seven screws (2) and tighten securely.
- 4. Install the nut (1) and tighten securely.

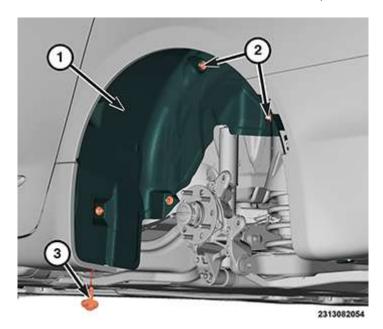

- 5. Install the one screw (3) into the wheelhouse splash shield (1) and tighten securely.
- 6. Install the four nuts (2) and tighten securely
- 7. Install the tire and wheel assembly (Refer to 22 Tires and Wheels/Removal and Installation).