
CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

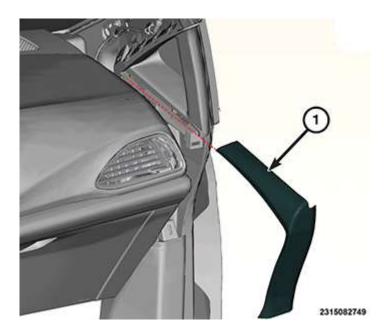


- 1. Using a trim stick or equivalent, release the A-pillar extension (1) then pull rearward to remove.
- 2. Using a trim stick or equivalent, separate the front of the lower B-pillar trim panel from the cowl side trim panel.

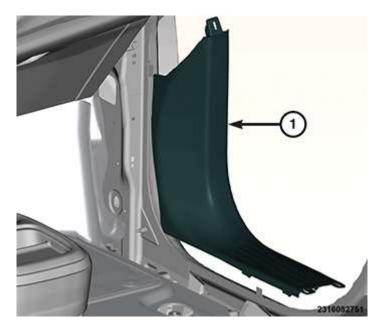


3. Lift the cowl side trim (1) at the rear, then pull rearward and remove.

INSTALLATION

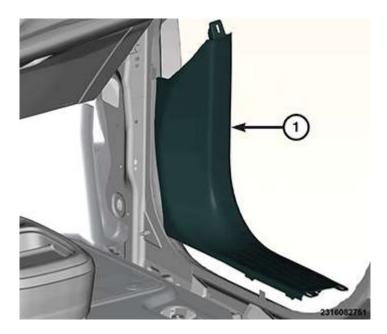

- 1. Install the cowl side trim (1) at the front, then hand tap the rear to install the retaining clips.
- 2. Position the lower B-pillar trim panel (1) and hand tap to engage the retaining clips.

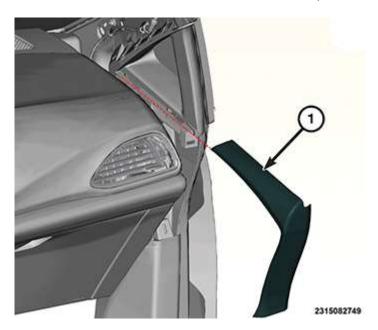

3. Position the top of the A-pillar extension (1) into the slots, then push forward to engage the retaining clips.