CHILTONLIBRARY



Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL



- 1. Close the front glass and open the sunshade fully.
- 2. Remove the sunroof (Refer to Body/Sunroof, Removal and Installation).
- 3. Remove the six screws (1) then the rear glass (2).

INSTALLATION

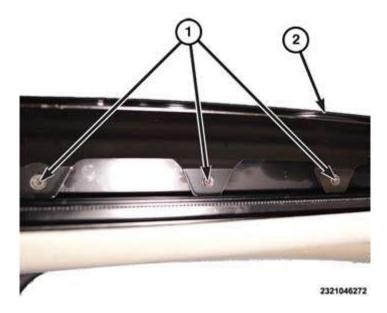

- 1. Position the rear glass (2) and loosely install the six screws (1).
- 2. Install the sunroof (Refer to Body/Sunroof, Removal and Installation).
- 3. Adjust the rear glass (Refer to Body/Sunroof/GLASS, Sunroof Adjustments)(Refer To List 1).
- 4. Verify sunroof operation.

Refer To List:

List 1

- 23 Body / Sunroof, Dual Pane / GLASS, Sunroof, Front / Adjustments
- 23 Body / Sunroof, Dual Pane / GLASS, Sunroof, Rear / Adjustments