
# **CHILTON**LIBRARY



# **Removal & Installation**


## **REMOVAL AND INSTALLATION**

## **REMOVAL**

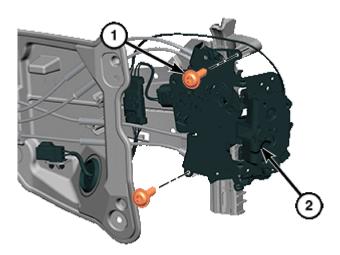


2312062004

- 1. Remove the rear carrier plate (Refer to Body/Doors Sliding/PLATE, Carrier/Removal and Installation). (Refer To List 1)
- 2. Remove the screws (1) and separate the latch assembly (2) from the presenter bracket.

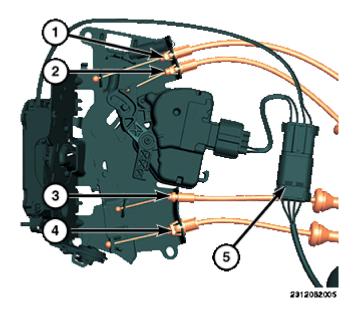


3. Disconnect the lock control cable (2) and remove the cable from the carrier plate.

## **INSTALLATION**

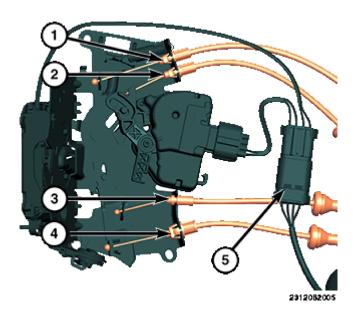

1. Install the lock control cable (2) onto the carrier plate and connect it to the latch.

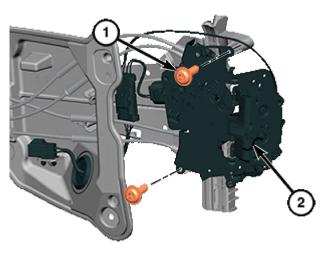

- 2312062004
- 2. Install the latch assembly (2) onto the presenter bracket and install the screws (1).
- 3. Install the rear carrier plate (Refer to 23 Body/Doors Sliding/PLATE, Carrier/Removal and Installation). (Refer To List 1)

#### **Refer To List:**

#### List 1

- 23 Body / Doors Sliding / PLATE, Carrier Front / Removal and Installation
- 23 Body / Doors Sliding / PLATE, Carrier Rear / Removal and Installation