
# **CHILTON**LIBRARY



## **Removal & Installation**

#### **REMOVAL AND INSTALLATION**

#### **REMOVAL**

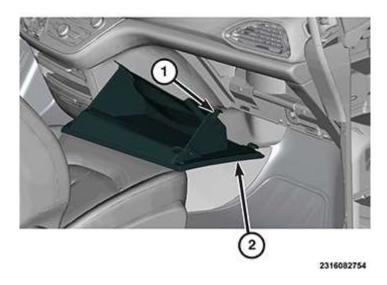


- 1. Open the glove box door (2).
- 2. Remove the support strap and retainer from the glove box door.

### NOTE

Release the support strap slowly so it stays accessible for installation.

3. Push in on the glove box door stops (1), then rotate the glove box door downward and remove.

#### **INSTALLATION**

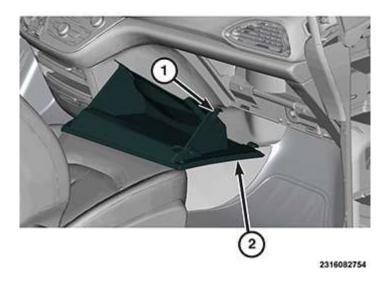

- 1. Align the glove box door (2) in the lower hinge slots.
- 2. Install the support strap and retainer into the slot on the glove box door.
- 3. Push in on the glove box door stops (1) and rotate the glove box door upward.