CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

1. Disconnect and isolate the battery negative cable.




2. Using a trim stick (1)





or equivalent, disengage the seat switch bezel (2) from the D-Pillar trim panel.

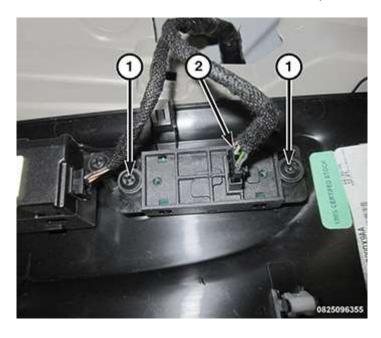

- 3. Disconnect the switch electrical connector (2).
- 4. Remove two screws (1) securing the switch to the bezel.
- 5. Remove the switch.

INSTALLATION

- 1. Secure the switch to the bezel using two screws.
- 2. Position and align the seat switch with bezel into the D-pillar switch opening.
- 3. Connect the switch electrical connector.
- 4. Push switch into upper D-Pillar trim panel until both the upper and lower retaining tabs are fully engaged.
- 5. Connect the battery negative cable.
- 6. Using an appropriate scan tool, check and erase any third row power folding seat control module diagnostic trouble codes related to the D-Pillar switch.