CHILTONLIBRARY




Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL

- 1. Apply adhesive tape to the surrounding body panels to protect against damage.
- 2. Remove the cowl panel cover (Refer to Body/Exterior/COVER, Cowl Panel/Removal and Installation).
- 3. Remove the wheel on the side of the vehicle being worked on, (Refer to Tires and Wheels/Removal and Installation).
- 4. Remove the wheelhouse splash shield from the side of the vehicle being worked on (Refer to Body/Exterior/SHIELD, Splash/Removal and Installation).(Refer To List 1)
- 5. Remove the sill cladding (Refer to Body/Exterior/CLADDING, Body, Sill/Removal and Installation).
- 6. Remove the front fascia (Refer to Frame and Bumpers/Bumpers/FASCIA, Front/Removal and Installation).
- 7. Remove the headlamp assembly from the side of the vehicle being worked on (Refer to Electrical/Lamps/Lighting Exterior/UNIT, Front Lamp/Removal and Installation).

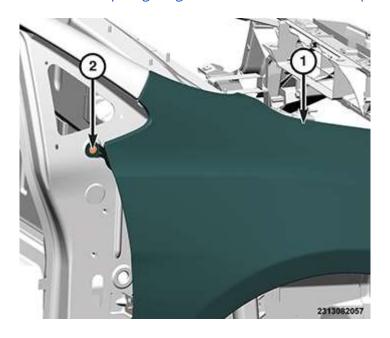


8. Open the door and remove the bolt (2) from the fender (1).

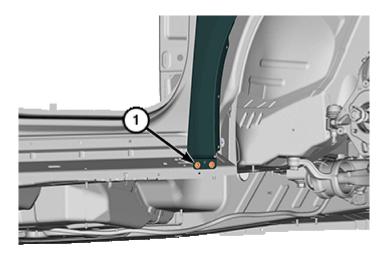


2913081996


9. Remove the two bolts (1) from the bottom.

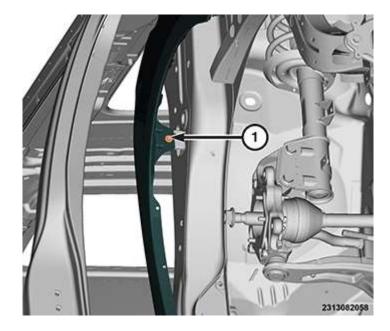


10. Remove the bolt (1).

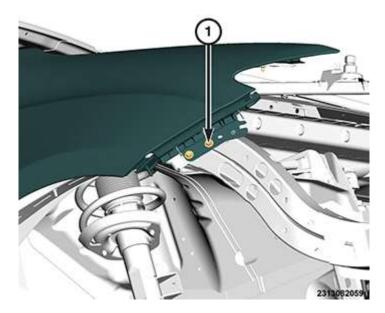

11. Remove the two bolts (1).

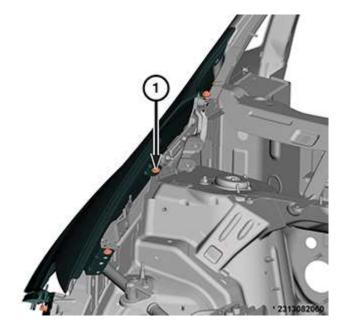


12. Remove the three bolts (1).

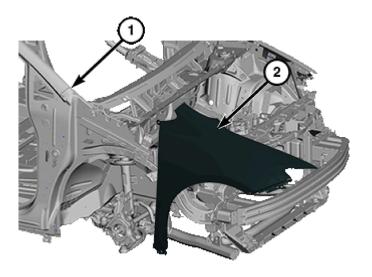

2313061997


13. Remove the fender (2) from the vehicle.

INSTALLATION

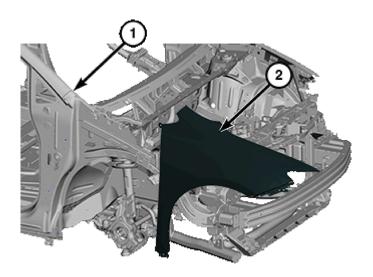


2313061997


- 1. Position the fender (2) onto the vehicle (1) and install all bolts without tightening.
- 2. Check the fender positioning with the door and the hood.

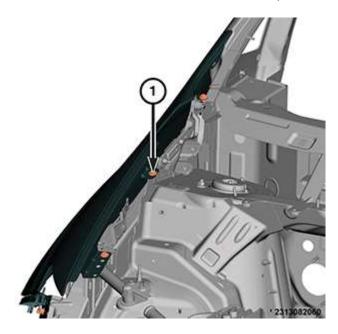


3. Tighten the three fender bolts (1) to the proper (Torque Specifications).

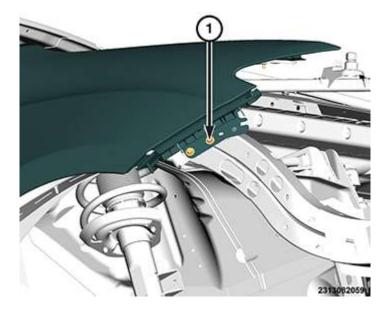

4. Tighten the two fender bolts (1) to the proper (Torque Specifications).

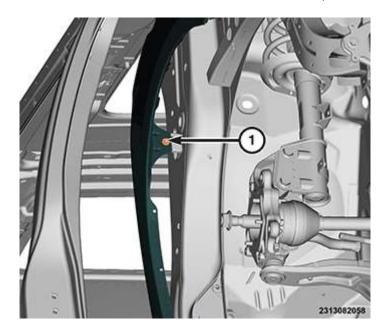


5. Tighten the fender bolt (1) to the proper (Torque Specifications).

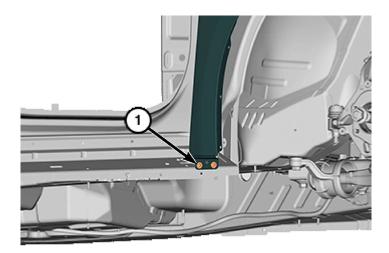

2913081996

6. Tighten the two fender bolts (1) to the proper (Torque Specifications).

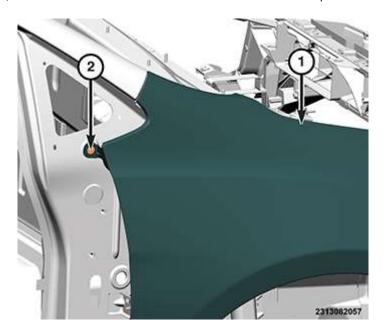

- 7. Tighten the fender bolt (2) to the proper (Torque Specifications).
- 8. Install the headlamp assembly (Refer to 08 Electrical/Lamps/Lighting Exterior/UNIT, Front Lamp/Removal and Installation).
- 9. Install the front fascia (Refer to Frame and Bumpers/Bumpers/FASCIA, Front/Removal and Installation).
- 10. Install the sill cladding (Refer to Body/Exterior/CLADDING, Body, Sill/Removal and Installation).
- 11. Install the wheelhouse splash shield (Refer to 23 Body/Exterior/SHIELD, Splash/Removal and Installation).(Refer To List 1)
- 12. Install the wheel on the side of the vehicle being worked on (Refer to Tires and Wheels/Removal and Installation).
- 13. Install the cowl panel cover (Refer to 23 Body/Exterior/COVER, Cowl Panel/Removal and Installation).

Refer To List:

List 1

- 23 Body / Exterior / SHIELD, Splash, Front Wheelhouse / Removal and Installation
- 23 Body / Exterior / SHIELD, Splash, Rear Wheelhouse / Removal and Installation